TIPPMANN®

98 CUSTOM™ BASIC PARTS LIST

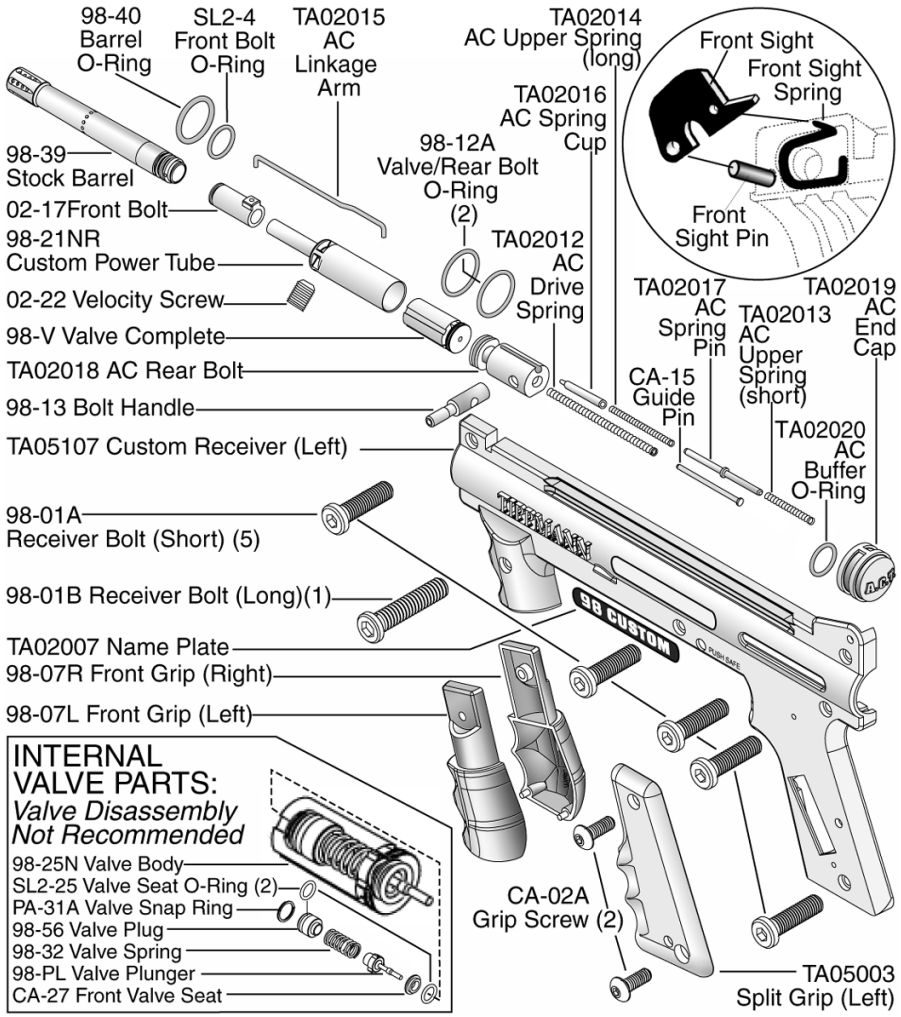

INTERNAL VALVE PARTS:

Valve Disassembly Not Recommended

TRIGGER ASSEMBLY

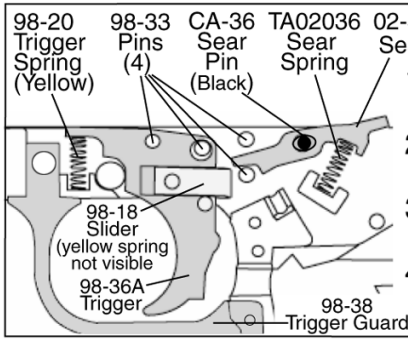

1) Place 4 dowel pins and 1 black sear pin into locations as shown.
2) Then place the trigger and sear onto pins as shown.
3) Insert sear spring as shown.
4) Insert trigger spring (yellow) as shown.

⚠ WARNING

DO NOT DISASSEMBLE THIS MARKER WHILE IT IS PRESSURIZED WITH AIR. DO NOT PRESSURIZE A PARTIALLY ASSEMBLED MARKER.

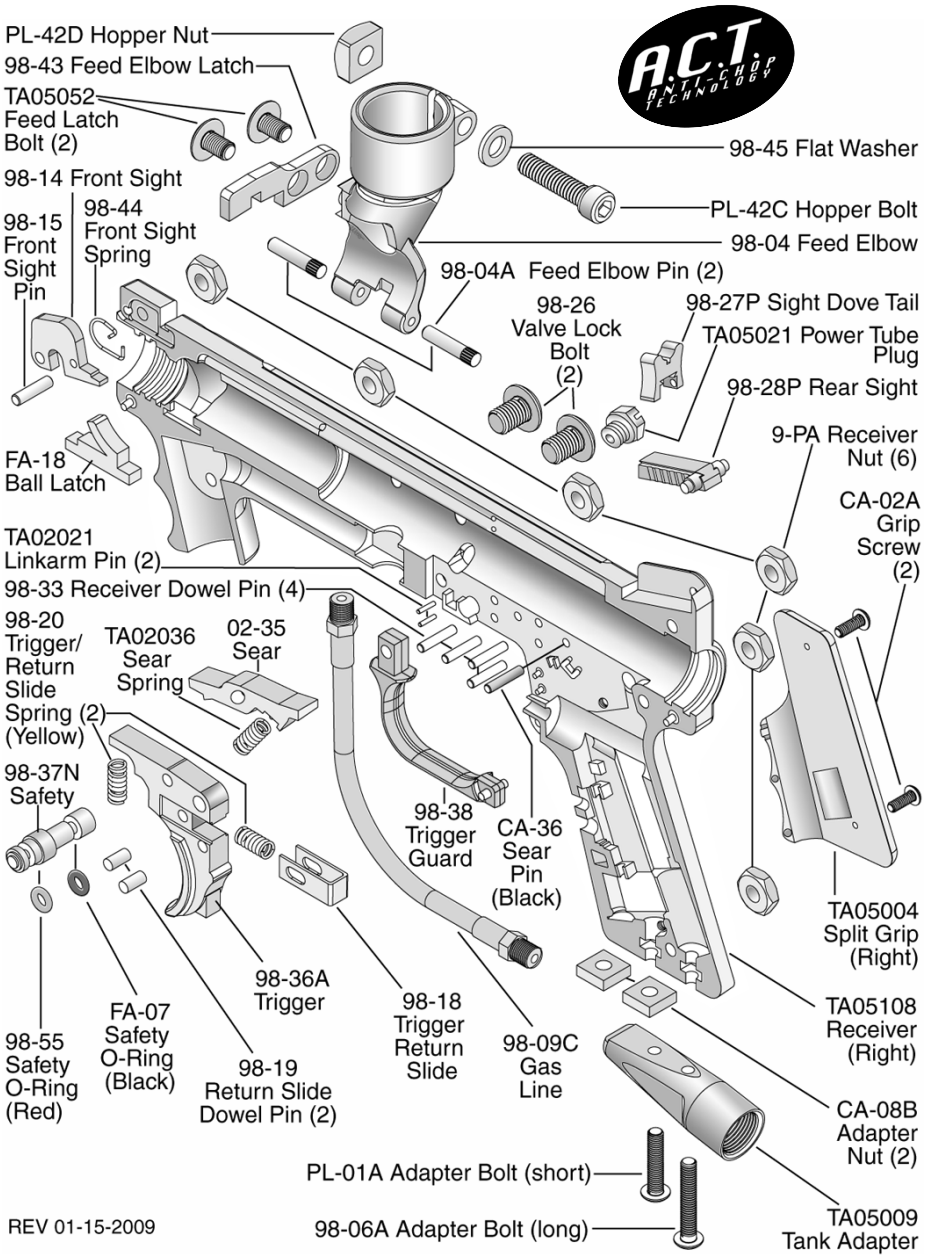

REV 01-15-2009

1-800-533-4831 • www.tippmann.com